






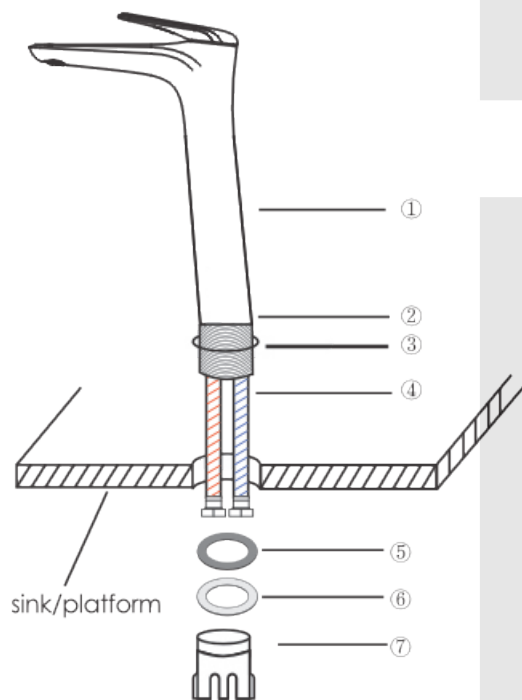


# Instruction Manual

## Standard Parts List

① 	② 	③ 	④ 
Faucet body	Threaded tube	O-ring	inlet water hose x2
	⑤ 	⑥ 	⑦ 
	Rubber Gasket	Stainless Steel Gasket	Nut











## Installation Steps

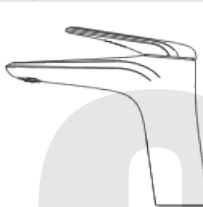1. Connect the threaded tube② to the faucet body①
2. Connect the water hose④ to the faucet body①, Red water hose on left and Blue water hose on right
3. Place the O-ring③ on the hole of the sink/platform (optional installation)
4. Insert the assembled faucet body① to hole of sink/platform
5. Align the rubber gasket⑤, stainless steel gasket⑥ and nut⑦ as shown, tighten the nut⑦ by hands
6. Connect the water hose④ to angle valves

# Instruction Manual

## Standard Parts List

① 	② 	③ 	④ 
Faucet body	Threaded tube	O-ring	inlet water hose x2
	⑤ 	⑥ 	⑦ 
	Rubber Gasket	Stainless Steel Gasket	Nut

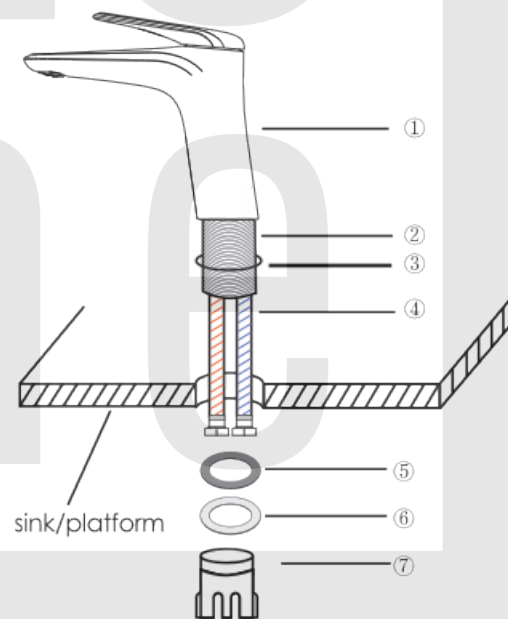

## Installation Steps

1. Connect the threaded tube② to the faucet body①
2. Connect the water hose④ to the faucet body①, Red water hose on left and Blue water hose on right
3. Place the O-ring③ on the hole of the sink/platform (optional installation)
4. Insert the assembled faucet body① to hole of sink/platform
5. Align the rubber gasket⑤, stainless steel gasket⑥ and nut⑦ as shown, tighten the nut⑦ by hands
6. Connect the water hose④ to angle valves