
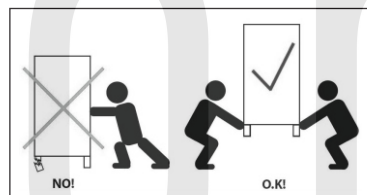




SLIM

S03 - Komoda 2 drz.

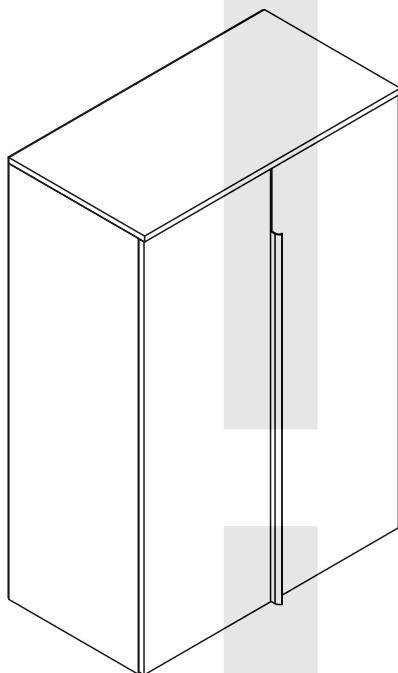


- (D) Montageanleitung
- (FR) Notice de montage
- (NL) Handleiding voor de montage
- (CZ) Montážní návod
- (HU) Szerelési útmutató
- (TR) Montaj talimatı

- (GB) Assembly instructions
- (IT) Istruzioni di montaggio
- (PL) Instrukcja montażu
- (SK) Návod na montáž
- (RO) Instrucțiuni de montaj
- (RU) ИНСТРУКЦИЯ ПО МОНТАЖУ

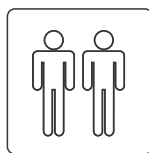



1,5 - 2






1

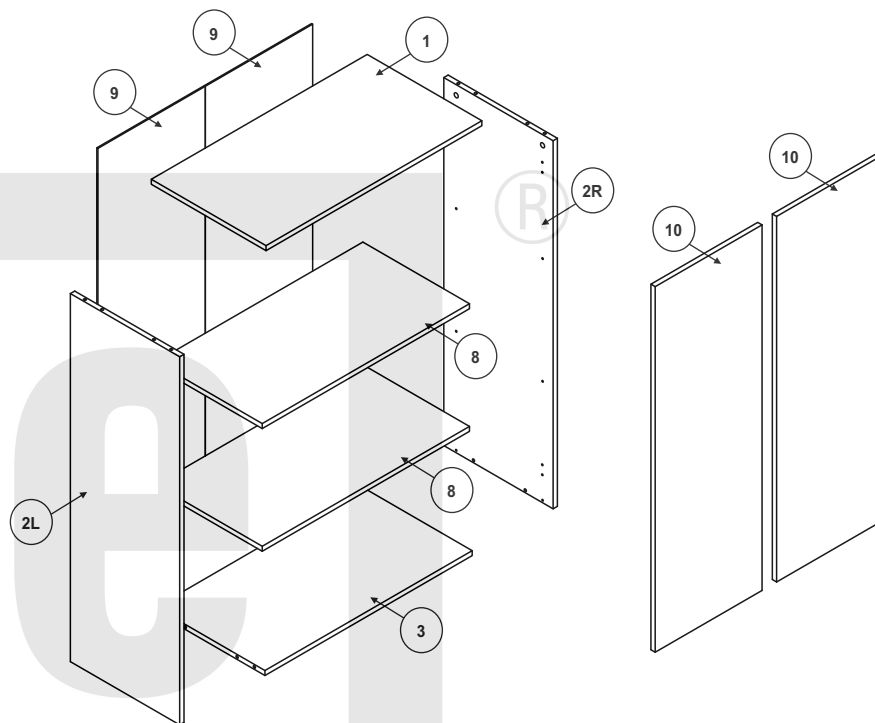


B x8	C 15x12 x8	ZK 20mm x8	A 8x35 x8	N 3,5x16 x11	SB x1	X x40
P x4	R H=0 x4	H 6,3x13 x8	OK x1	ZF x4	S L=1160 x1	ZB x8

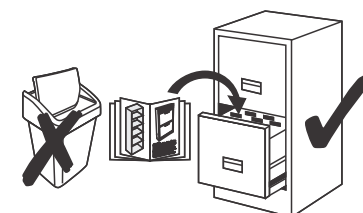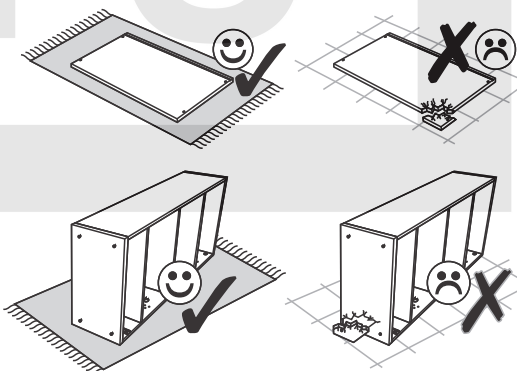




2

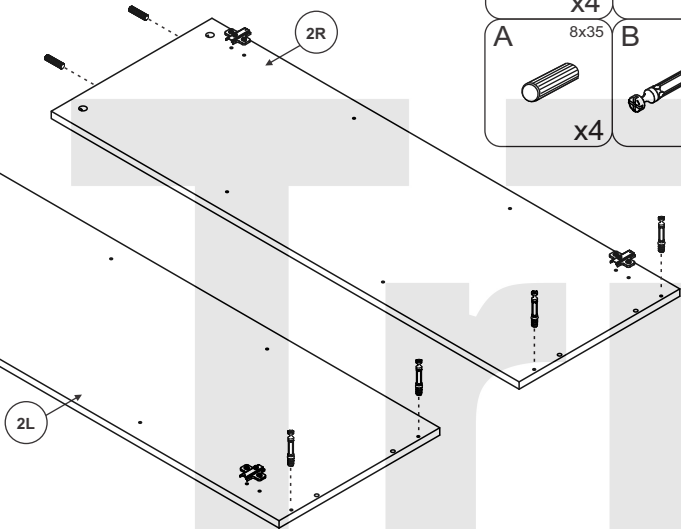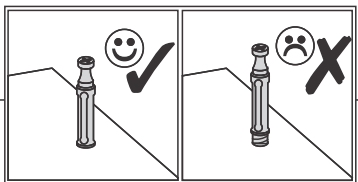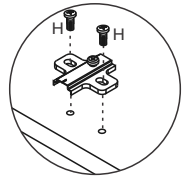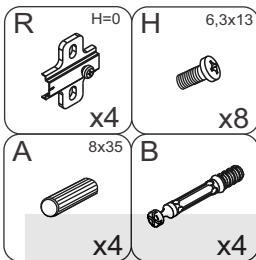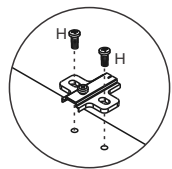


3

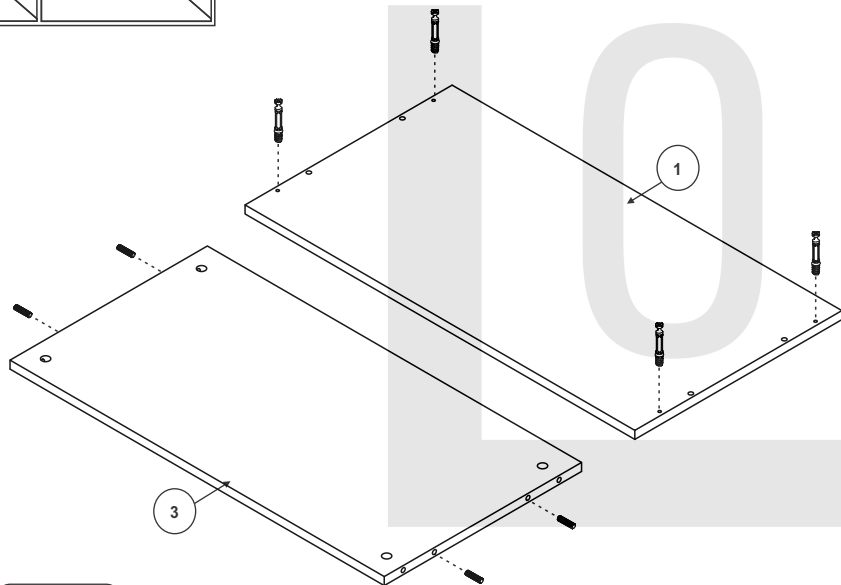




4

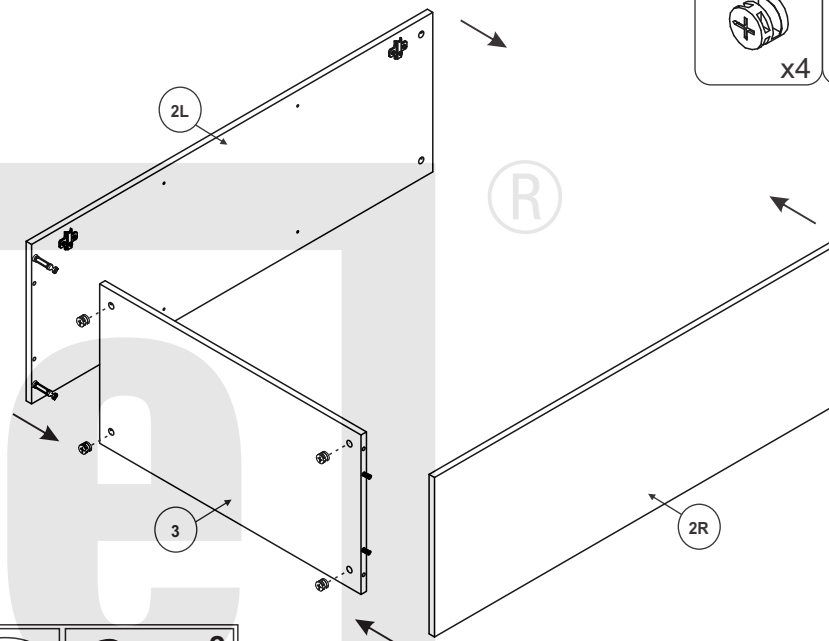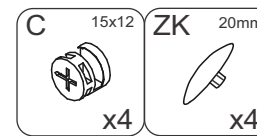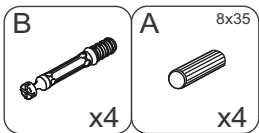

5




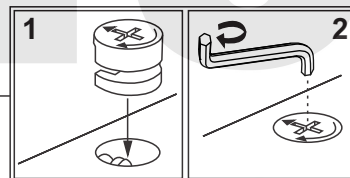


6

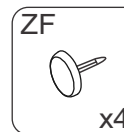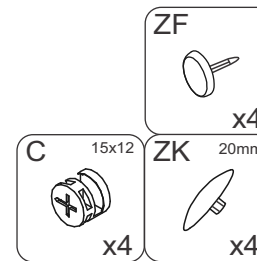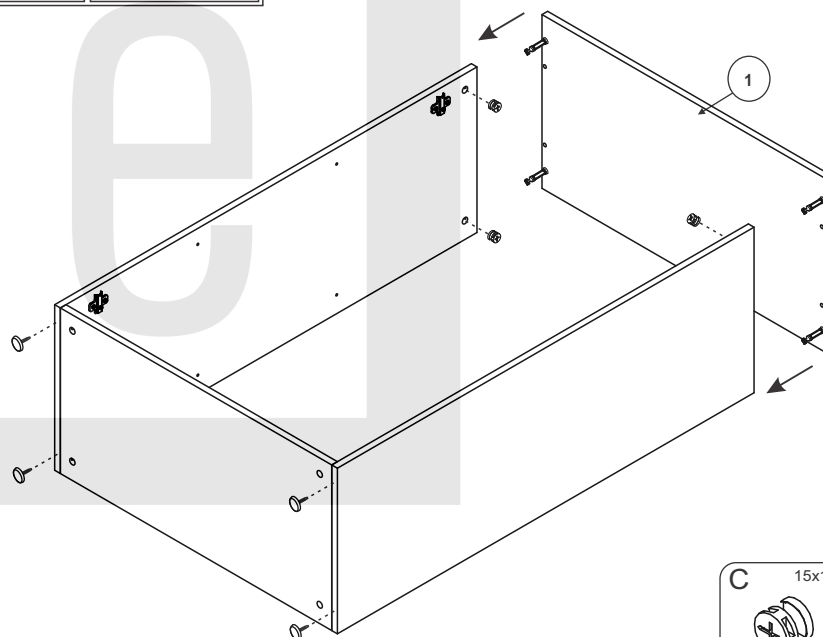



- X  x40
- S  L=1160 x1



7

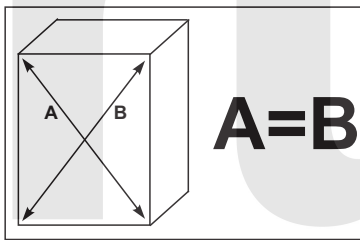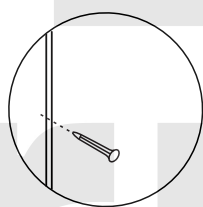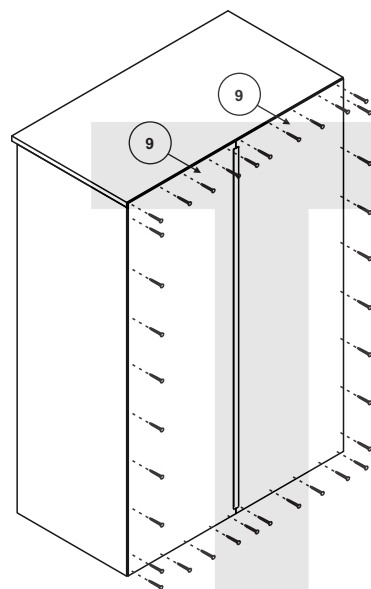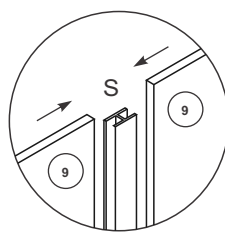




- ZB  x8

9

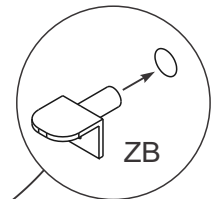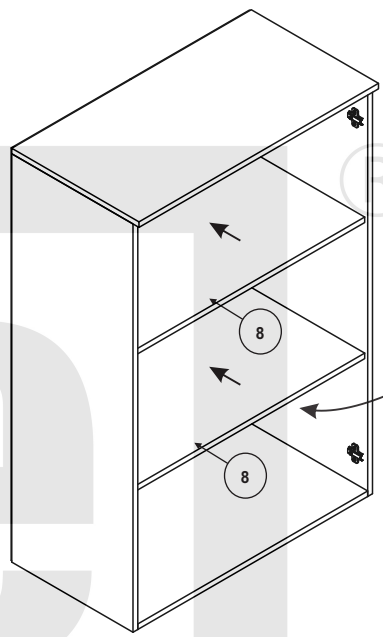

- N  3,5x16 x11
- P  x4
- OK  x1

8

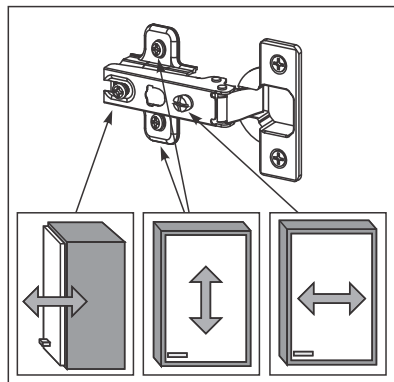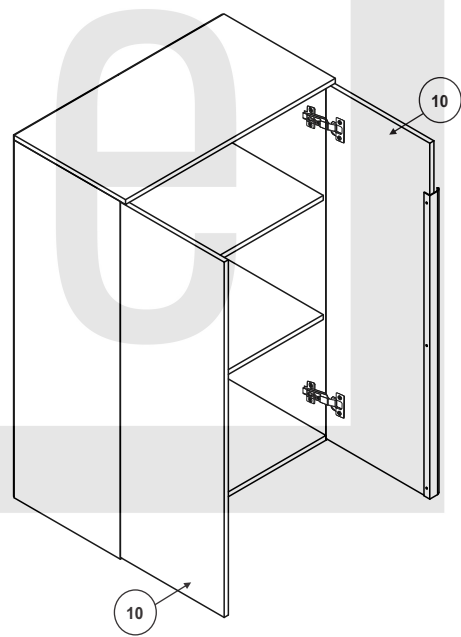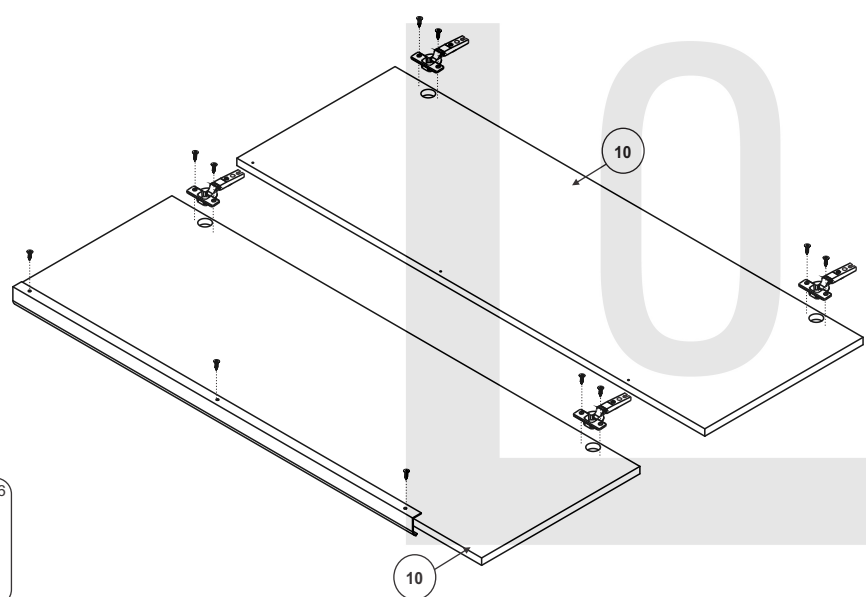

10