
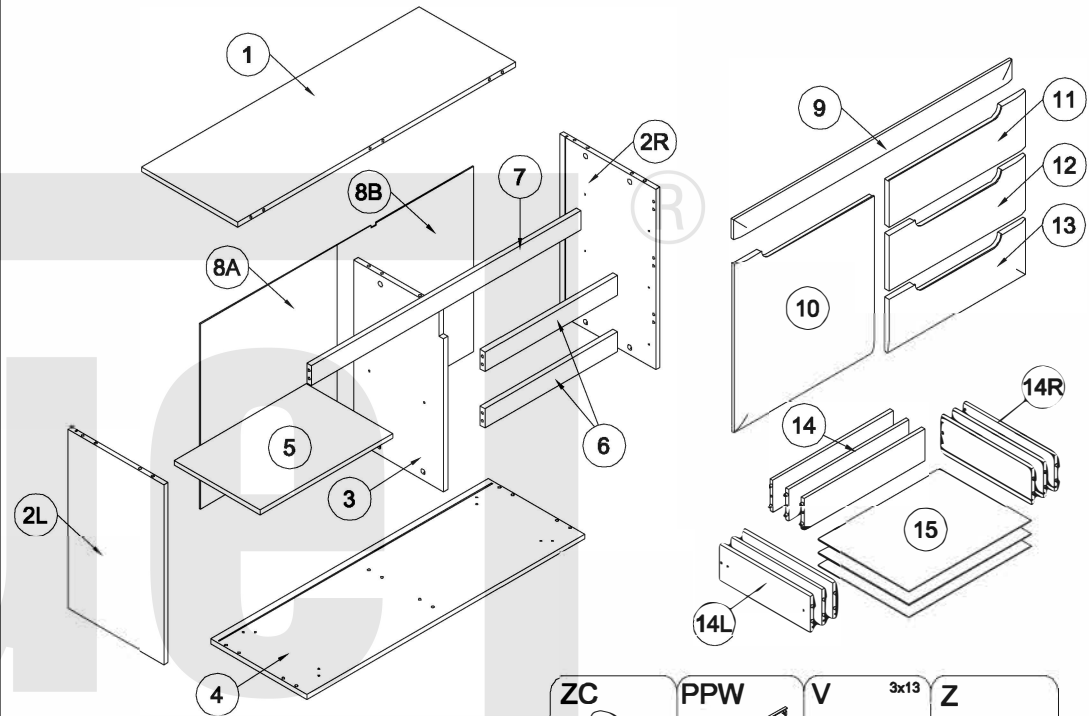



FJORD

NKSZ107

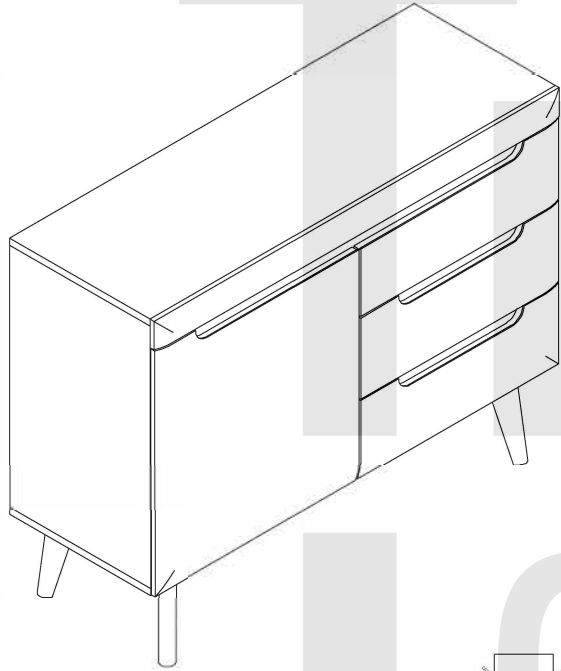


HD	NGD	N	3x20	X	NA	4x13	GLUE	TB	TA
x8	x4	x5	x10	x1	x1	x1	x1	x1	x1
B	A	R	8x32	H	6,3x13	PC	ND	3,5x16	C
x15	x27	x2	x4	x2	x2	x16	x15	x15	Z
ZC	PPW	V	3x13	Z					
x5	x6	x18	x4						

11.10.2016

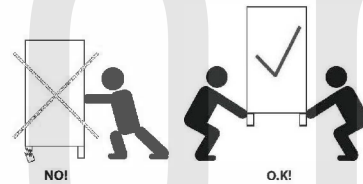



- (D) Montageanleitung
- (FR) Notice de montage
- (NL) Handleiding voor de montage
- (CZ) Montážní návod
- (HU) Szerelési útmutató
- (TR) Montaj talimati

- (GB) Assembly Instructions
- (IT) Istruzioni di montaggio
- (PL) Instrukcja montażu
- (SK) Návod na montáž
- (RO) Instrucțiuni de montaj
- (RU) Инструкции по монтажу



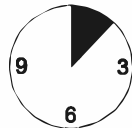


20 min.



1

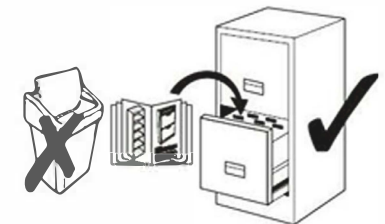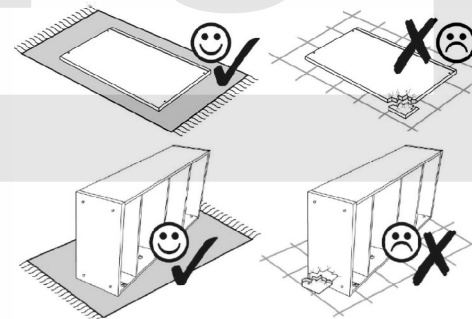



2

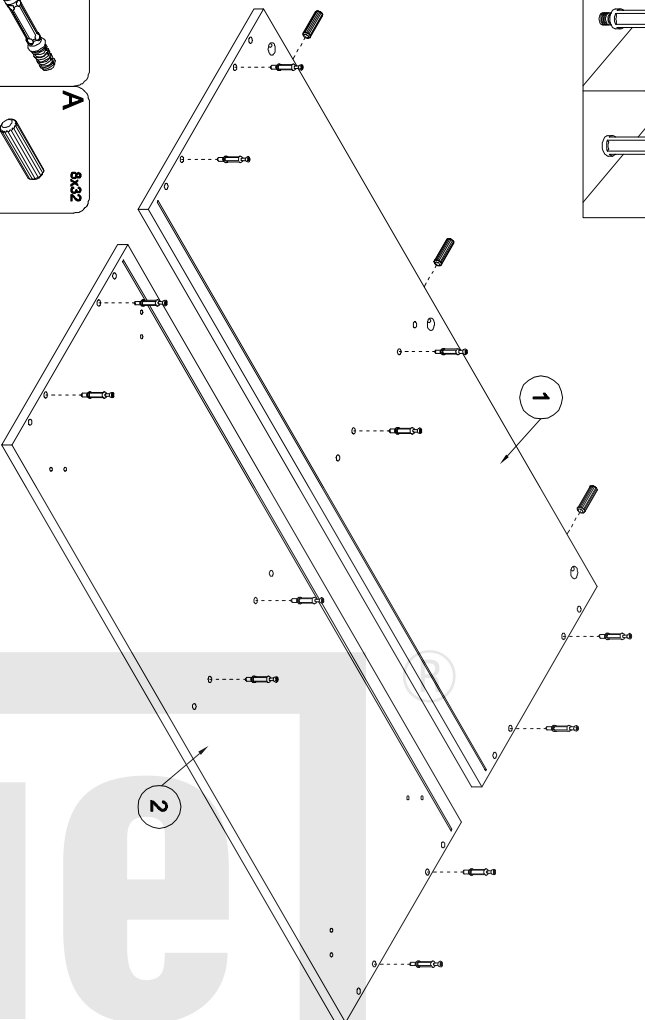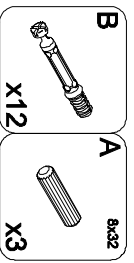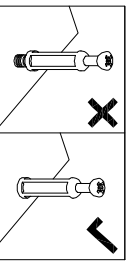



3

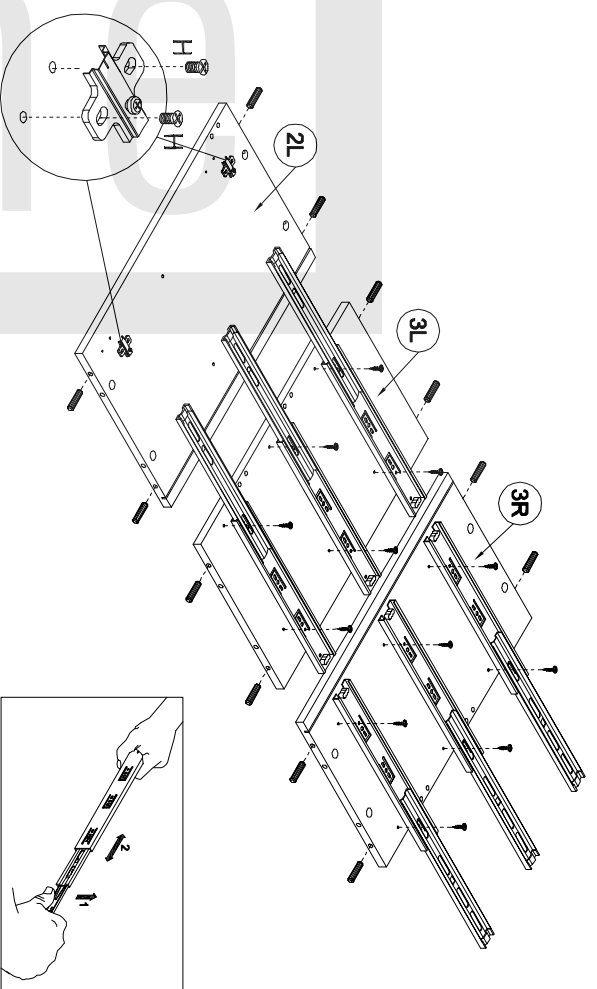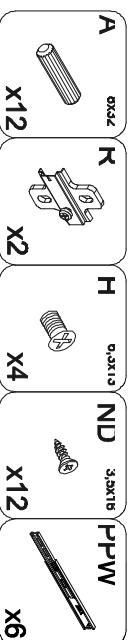



4

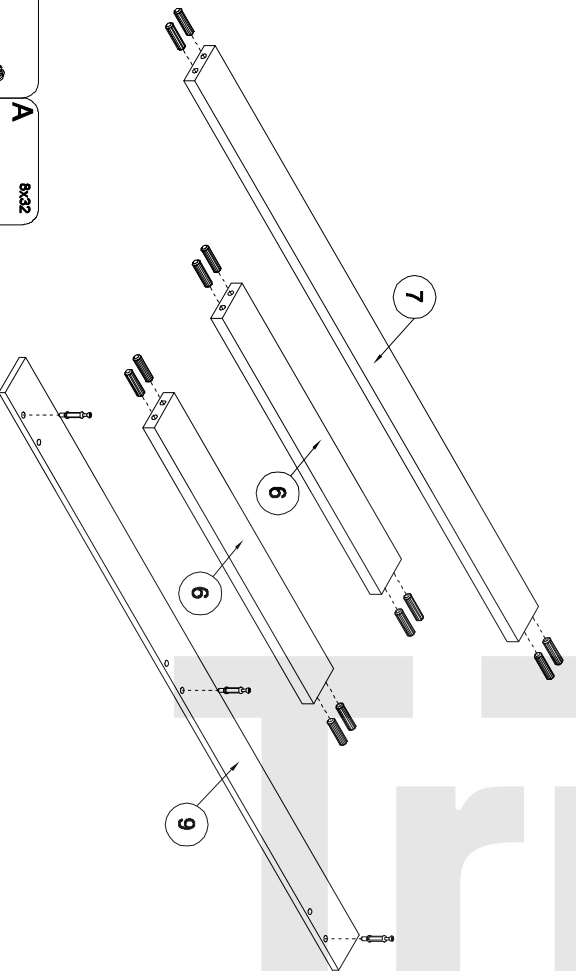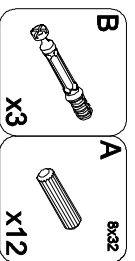


5

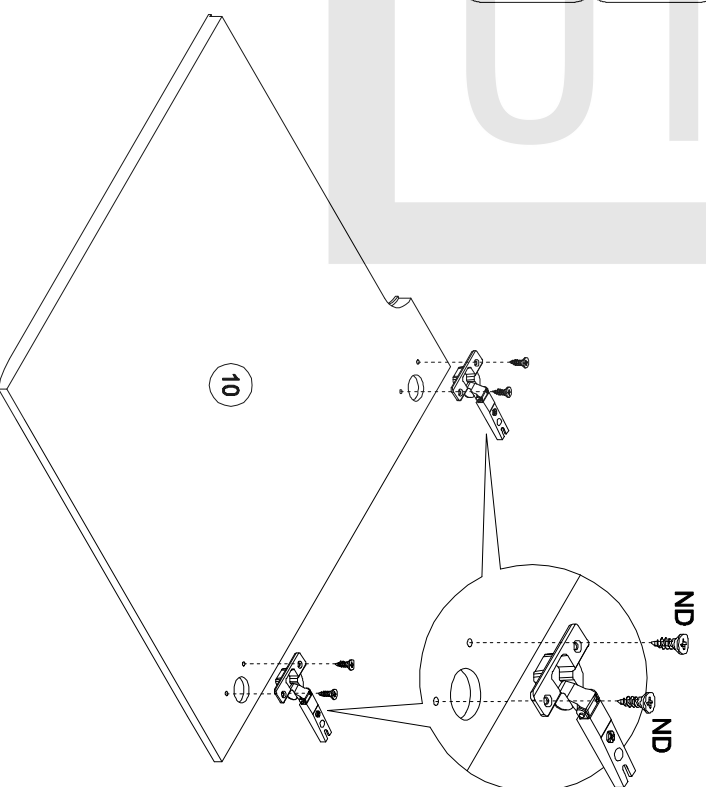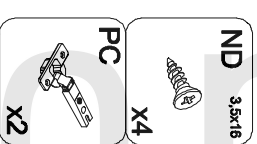



6

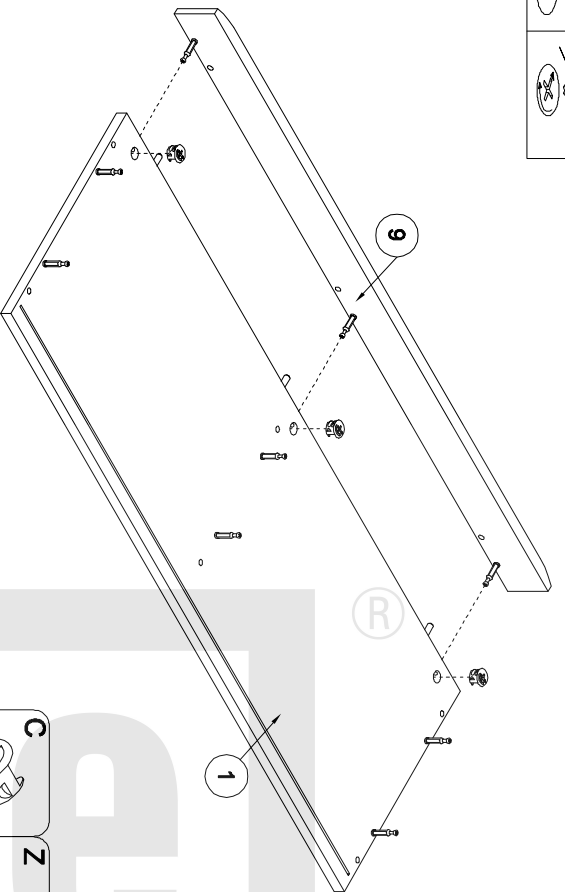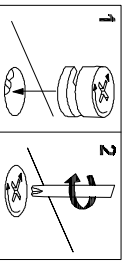



7

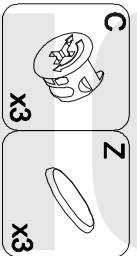


8

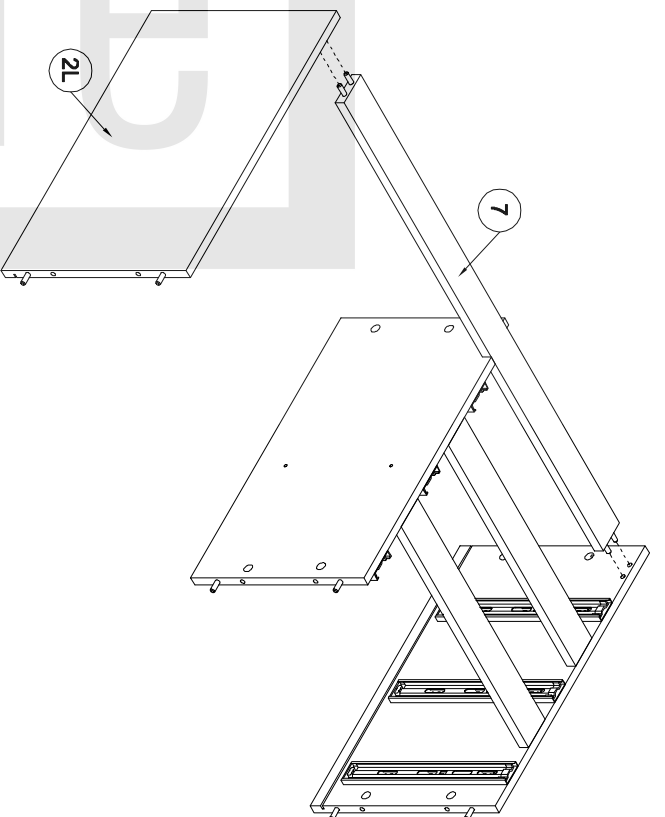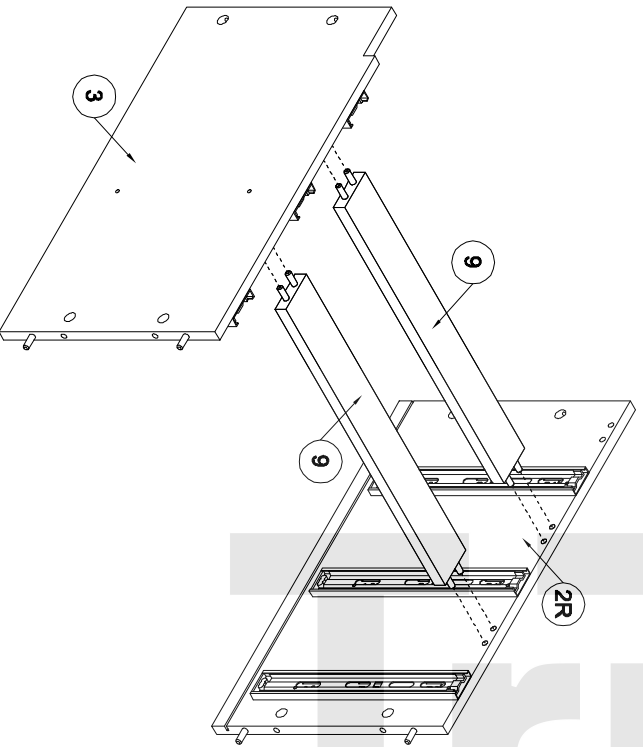


9

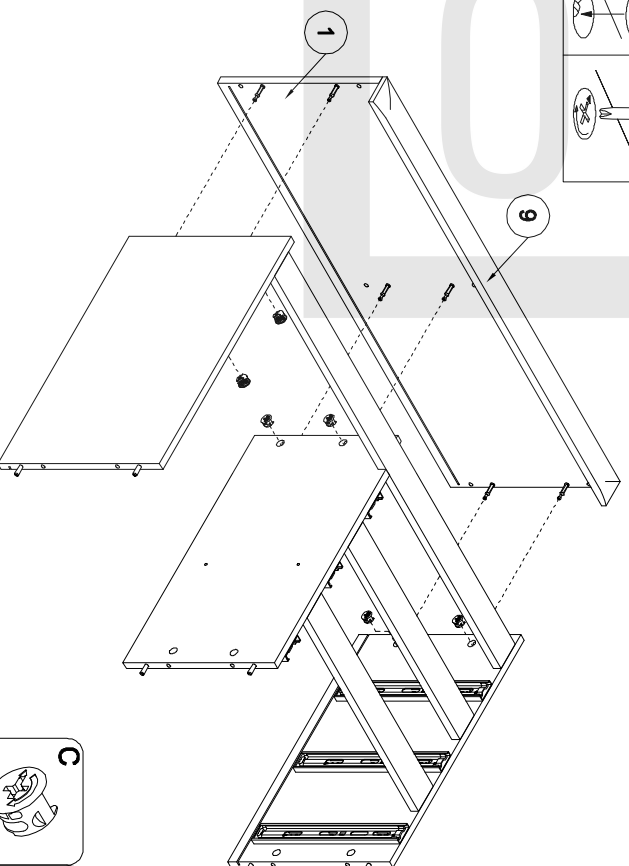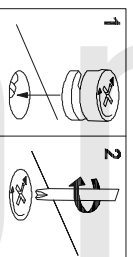


10

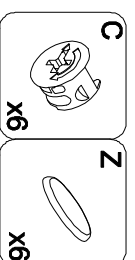





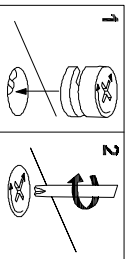
11

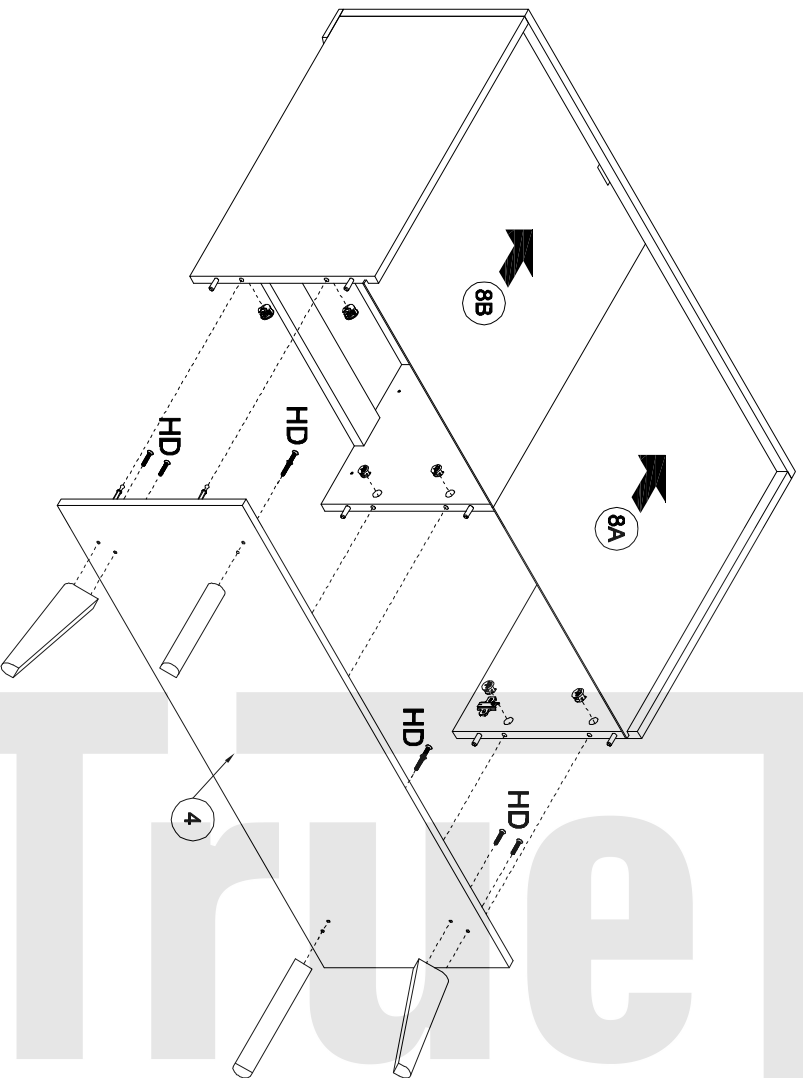


11



-  HD
x8
-  NGD
x4
-  C
x6
-  Z
x6

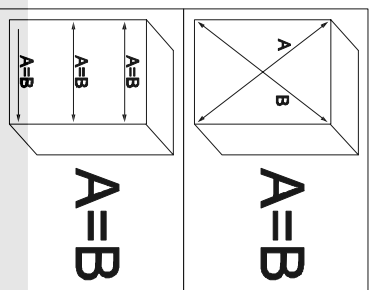


12

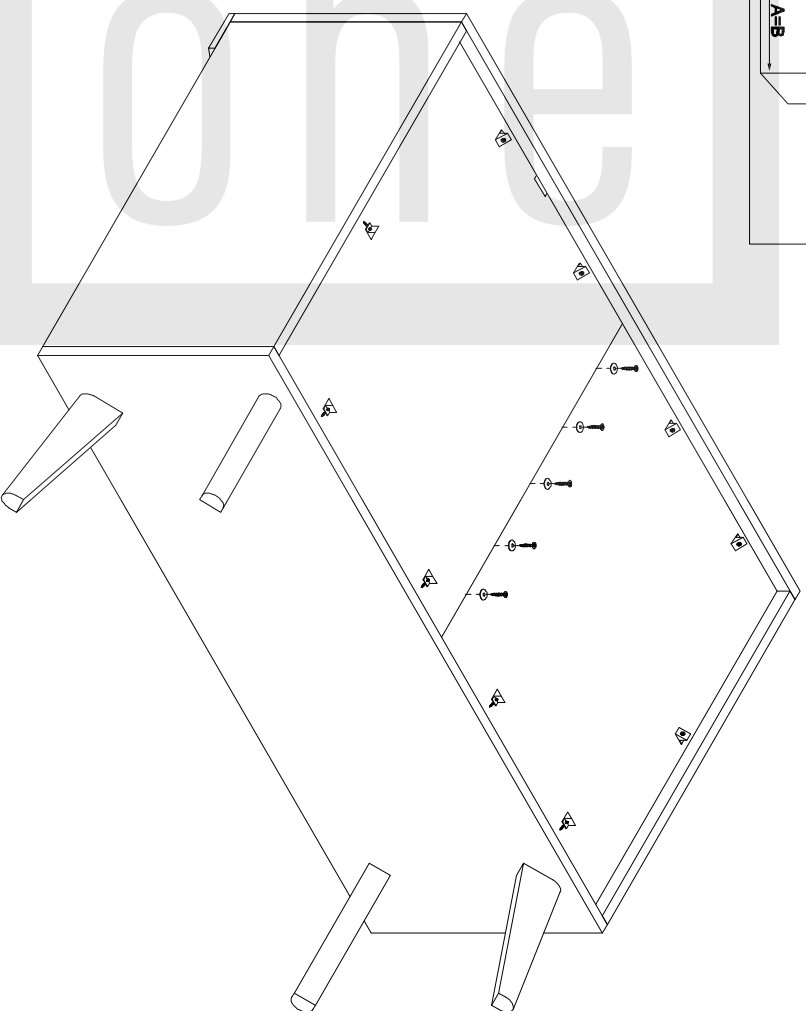


-  ZC
x5
-  N
3x20
x5
-  X
x10

13

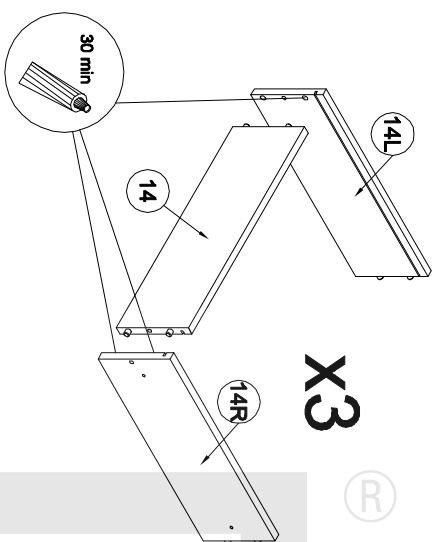


X3

®


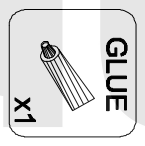





14

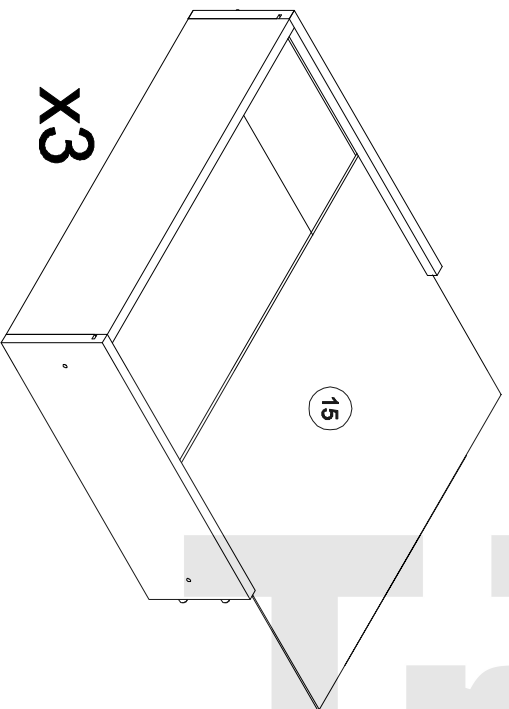

X3

15

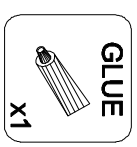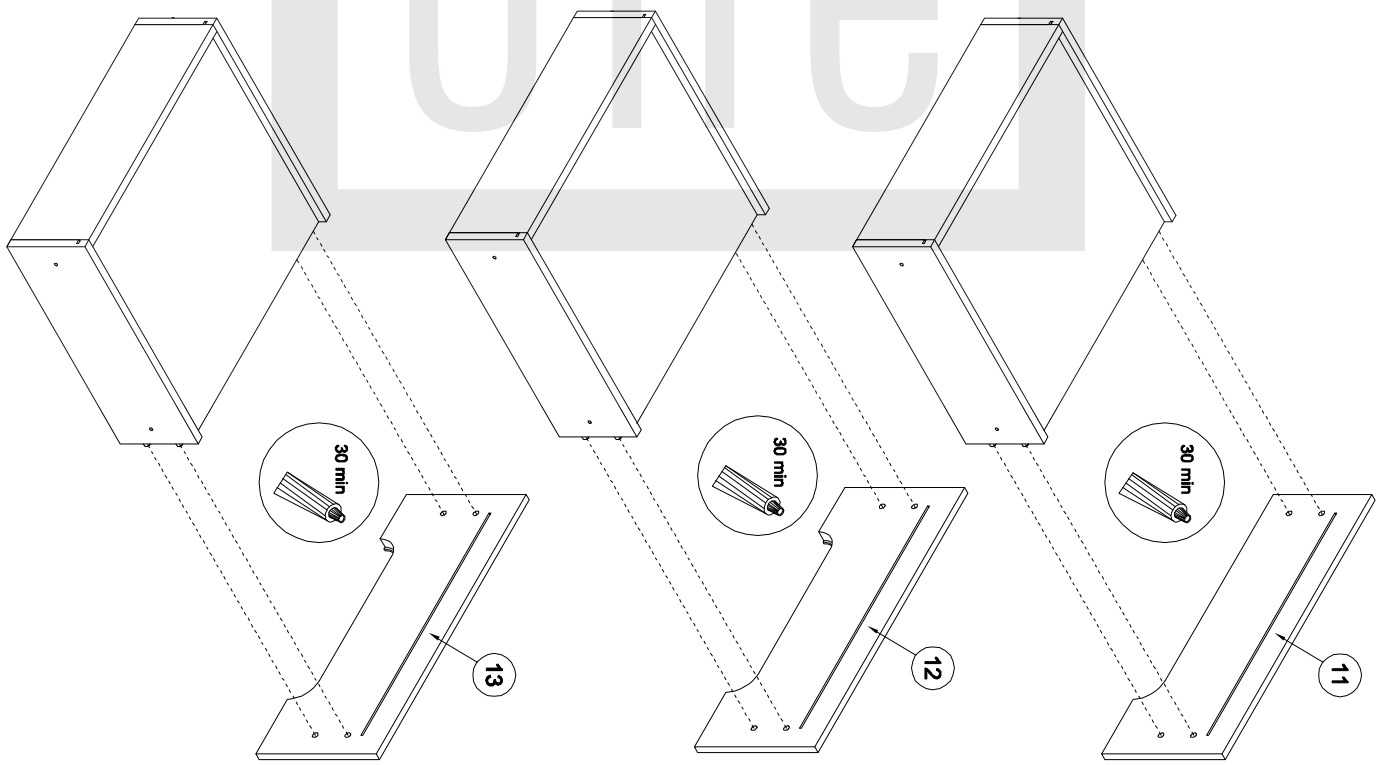

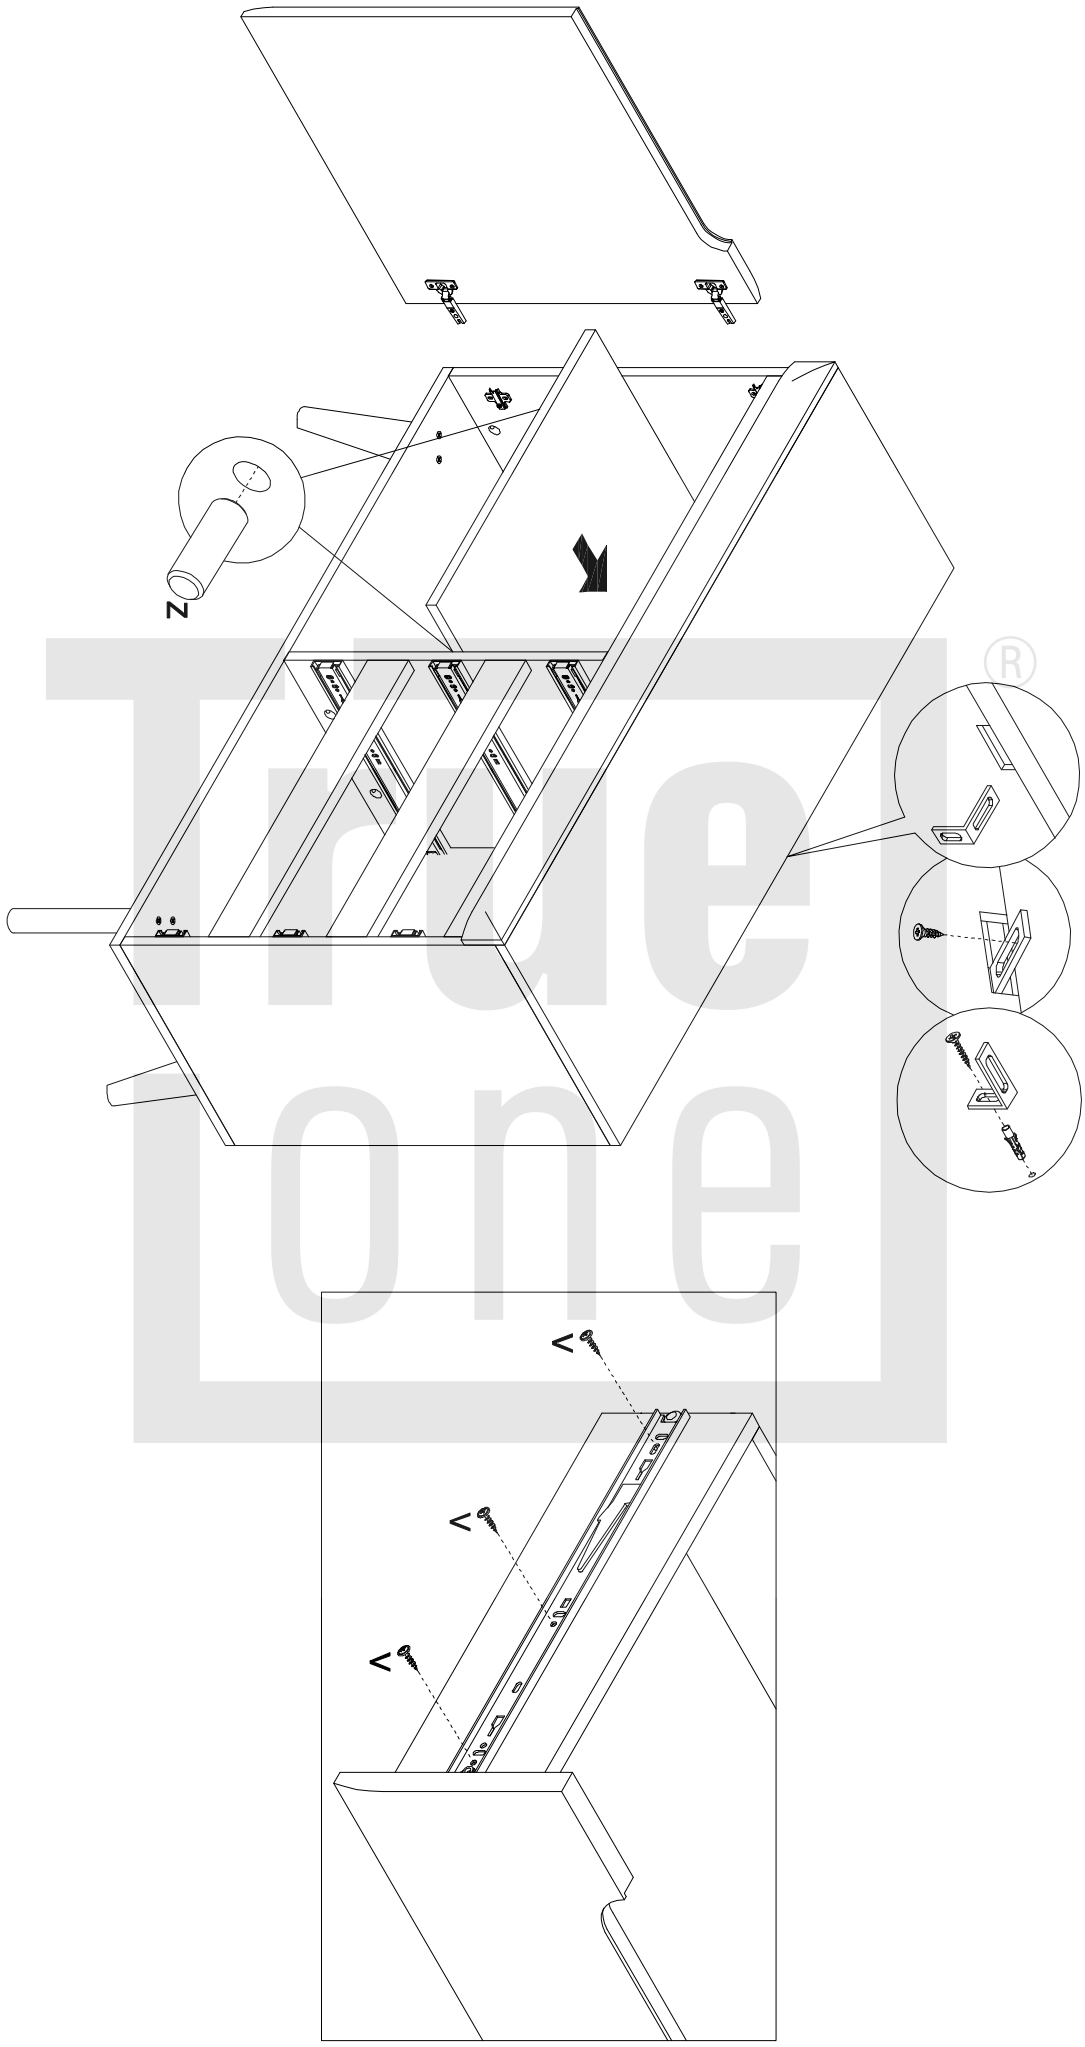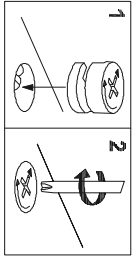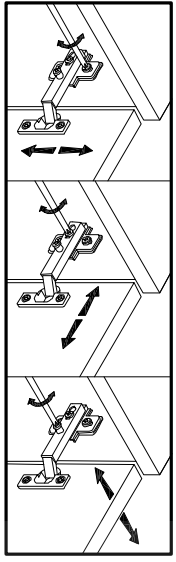

- TB X1
- TA X1
- NA 4x13 X1
- Z X4
- V 3x13 X18

